


MEASUREMENT INSTRUCTIONS FOR PRIME WINDOWS

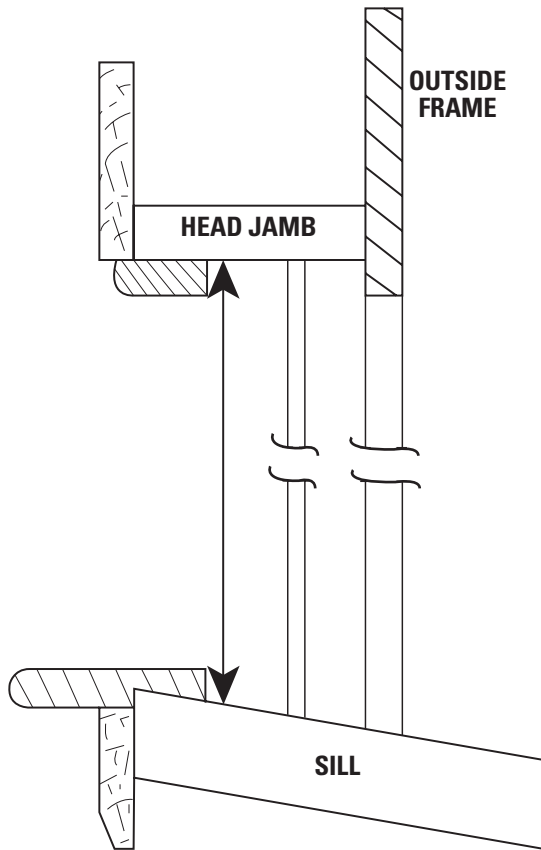

**MEASURE HEIGHT FROM
HEAD JAMB TO SILL**

MEASURE WIDTH FROM SIDE JAMB TO SIDE JAMB

