


MEASUREMENT INSTRUCTIONS FOR COMBINATION STORM WINDOWS

- 1.) Measure width between casings.
- 2.) Measure from sill to bottom of the top casing.
- 3.) If top and bottom sash are different heights, this is an ORIEL window. You must measure from the top of the opening to the center of the meeting rail.
- 4.) Determine if window casing is EASTERN (see 4A) or WESTERN (see 4B).
- 5.) When ordering, give width first, then height. If oriel, give the measurement from step 3. Specify if the casing is Eastern or Western.
- 6.) Alternatively, you may measure an existing storm window and order the window TIP-TO-TIP. You must indicate whether or not the height measurement includes the expander at the bottom of the window.

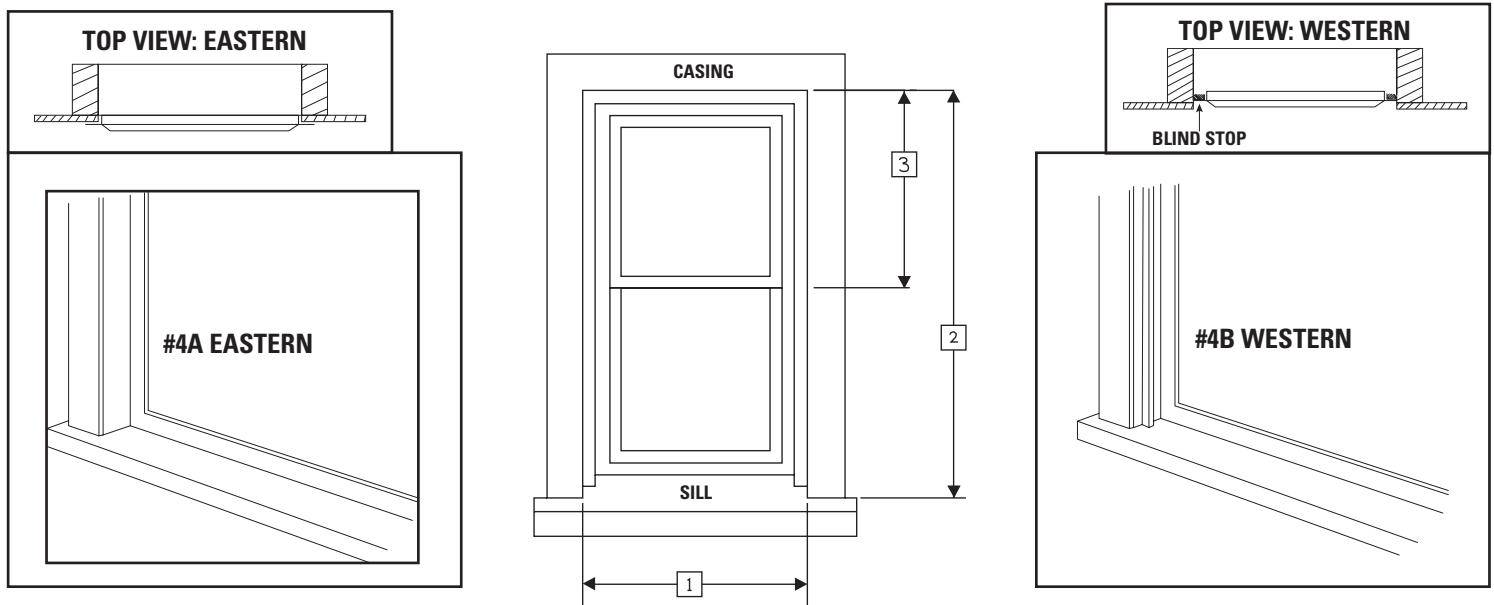

77 Newark St., Haverhill, MA 01832
Tel.: 800-351-1065
www.ciiwindows.com
sales@ciiwindows.com