



MEASUREMENT INSTRUCTIONS FOR COMBINATION STORM DOORS

- 1.) Measure width of door frame opening on top.
- 2.) Measure width of door frame opening in center.
- 3.) Measure width of door frame opening on bottom.
- 4.) Measure height of door frame opening on right.
- 5.) Measure height of door frame opening on left.
- 6.) Measure depth of rabbet (smallest recess on frame casing where storm door fits.)

If it measures $3/4''$, order EASTERN. If it measures $1\ 1/8''$, order WESTERN.

For width and height – order by smallest dimension. Always order width first, then height.

For prehung doors, facing the house from OUTSIDE, indicate which side the HINGE is on (hinged left or hinged right).

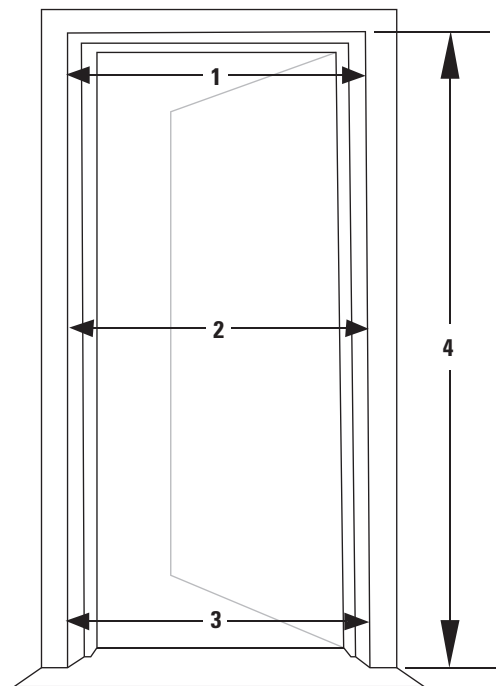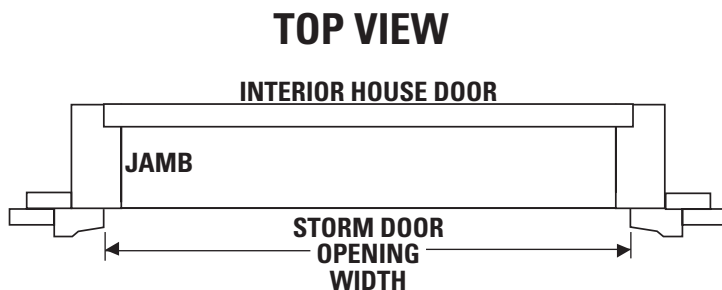

77 Newark St., Haverhill, MA 01832
Tel.: 800-351-1065
www.ciiwindows.com
sales@ciiwindows.com

To convert from Rough Opening: 36 x 80 RO
RO to TTT Door Size $-3/4''$ off width $-1''$ off height (35 $1/4$ x 79)
RO to TTT Door Size Including Zbars + $1\ 3/4''$ to width $1''$ to height (37 $3/4$ x 81)