


Installing STRIKER on FRENCH DOORS

TOP VIEW

INSIDE

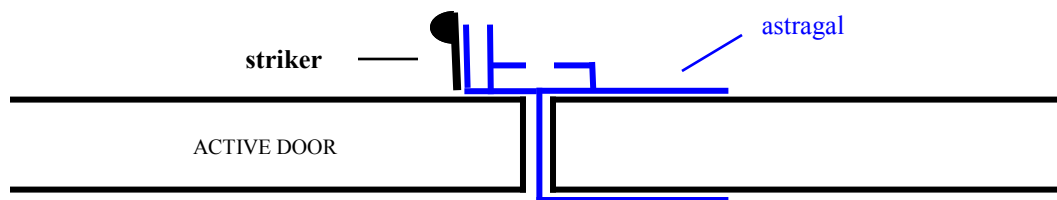

Install doors and secure inactive door with slide bolts. Install handle on active door.

From inside, close active door and use handle to align striker.

Striker is mounted on inside edge of astragal that protrudes behind closed door.

Questions? Call the 800 number below.

Coastal Industries, Inc.



Haverhill, MA 01832

tel: 800-351-1065

fax: 978-373-2239


Installing Striker on Inswinging Storm Door

TOP VIEW

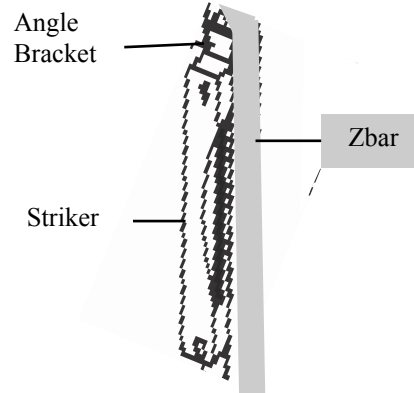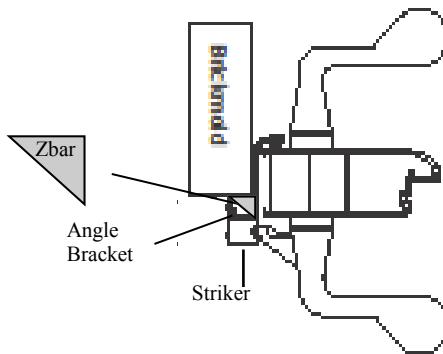

1. Install handle to determine striker position on brick mold.
2. Place angle bracket to square off zbar.
3. Place striker on angle bracket & screw into Zbar & casing.

Inswinging Door Bracket Installation

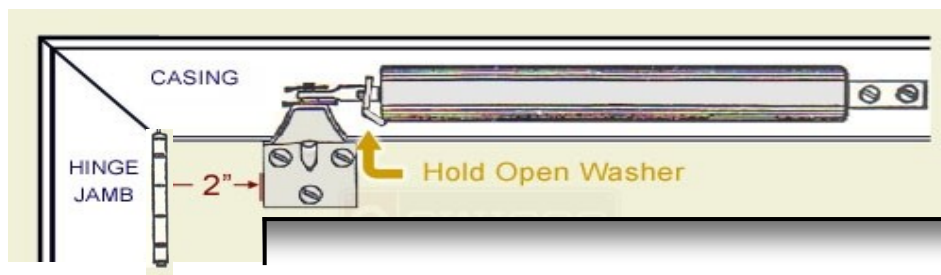

- Step 1** Install the in-swinging door bracket at the upper edge of the door as shown in the image. The 2" distance from the edge of the door can be reduced to take advantage of the added strength of screwing bracket into door corner gusset. Avoid aligning screws with miter.
- Step 2** Hook the closer rod onto the bracket. Hold the closer tube level and install the screws in bracket at the end of the tube. Note: be sure the "hold-open washer" is ahead of the lugs on the rod as shown.
- Step 3** With the connecting pin, attach the door bracket to the front hole of the closer tube. Open the door slightly and move the "hold-open washer" behind the lugs on the rod.

Coastal Industries, Inc..
Haverhill, MA 01832

tel: 800-351-1065 fax: 978-373-2239